

ECHO Complete Electronic Cigarette Kit User Manual

Safety instruction

This product must not be used by anyone under the age of 18, pregnant/breastfeeding, suffers from nicotine allergy or heart diseases.

Electronic cigarette, cartridges and accessories should be kept out of the reach and sight of children at all times.

Toxic if swallowed. Very toxic in contact with skin.

In case of accident or if you feel unwell, seek medical advice immediately.

Your ECHO Complete Kit

2 x Pre-filled cartomizer & mouthpiece

2 x Battery


1 x USB Charger

1 x USB Adapter

1. Preparing your new ECHO-cigarette

1.1 Charge your ECHO-battery. The battery is fully charged when the LED-light on the charger turns green.

1.2 Screw the battery into the pre-filled cartomizer. Insert the mouthpiece into the other end of the cartomizer.

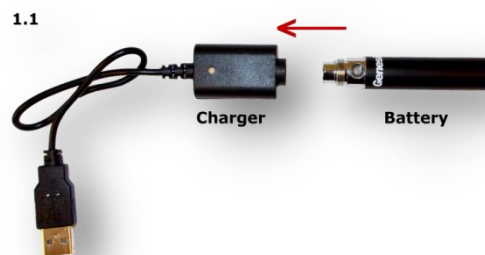

2. Using your ECHO electronic cigarette

To use:

Press and hold the activation button when inhaling.

Blue light indicates that the battery is active.

To lock/unlock:

Press the activation button 5 times in a row.

The lock/unlock status is indicated by three slow flashes

2.



3. Refilling the cartomizer

Once the pre-filled cartomizer has run out of liquid it is time to refill it.

ECHO cartomizers can hold up to 3ml of E-liquid.


Disconnect the cartomizer from the battery and remove the mouthpiece from the cartomizer.

Start filling the cartomizer by dropping E-liquid (sold separately) onto the sides of the cotton inside.

The cartomizer is full when the cotton stops absorbing it.

Wipe any leaking liquid with a tissue.

3.

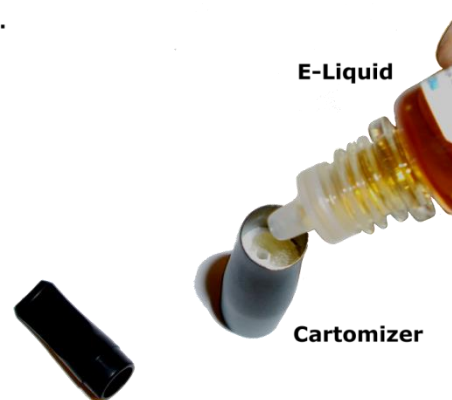

4. Cautions

Store your electronic cigarette in a protective case/bag. Do not attempt to open, pierce, weld or damage your electronic cigarette or its accessories. Batteries are explosives. Keep away from fire.